



PARTS LIST

No.	Parts No.	Description	Q'ty	No.	Parts No.	Description	Q'ty
1A	7432-01A	Housing	1	18	7432-18	Protector Cover	1
2A	7432-02A	Valve Bushing	1	19	7432-19	Valve Stem	1
3A	7432-03A	Housing Cap	1	20	7432-20	POM Ball	1
4	7432-04A	1/4" Collet (Incl. Nut) -Option	1	21	7432-21	Spring	1
	7432-04B	6mm Collet (Incl. Nut)	1	22A	7432-22A	O-Ring	1
6A	7432-06A	Collet Holder	1	23	7432-23	Screw	1
7A	7432-07A	Protector Cover	1	24A	7432-24A	Throttle Lever	1
8	7432-08	Ball Bearing	1	25	7432-25	Throttle Lever Pin	1
9A	7432-09A	Front End Plate	1	26	7432-26	Wrench (14mm)	2
11	7432-11	Key	1	27	7432-27	Spindle Socket	1
12A	7432-12A	Rotor	1	28	7432-28	Spindle	1
13	7432-13	Rotor Blade	4	29	7432-29	Ball Bearing (R6)	1
14	7432-14	Cylinder (Incl. Pin)	1	30	7432-30	Screw	1
16	7432-16	Rear End Plate	1	31	7432-31	Steel Pipe	1
17	7432-17	Ball Bearing	1	32	7432-32	Needle Bearing	1

ST-7432(M)-4-P-1208B-HY