



Index No.	Parts No.	Description	Index No.	Parts No.	Description
1	66-6133C01	Housing	25	66-6133C32	Nut (M5*0.8)
2	SP03004000	Spring Pin (3x40L)	26	06000ZZ	Ball Bearing (6000zz)
3	66-6133C03	Air Inlet	27	SP03002800	Spring Pin (3x28)
4	66-6133C04	Throttle Lever	28	OR00500200	O-Ring (5x2)
5	66-6133C05	Shaft	29	66-6133C29	Lock Ring
6	66-6133C06	Bushing	30	66-6133C30	Grip Hat
7	OR02105105	O-Ring (21.5x1.5)	31	66-6133C31	Shroud
8	OR01007105	O-Ring(2) (10.7x1.5)	32	06001ZZ	Ball Bearing (6001ZZ)
9	52236	O-Ring (10.5x1)	33	66-6132A13	Washer
10	66-6133C10	Regulator	34	66-6132A34	Shaft
11	66-6133C26-11S	Silencer	35	60-613135	Snap Ring
12	66-6133C12	Adapter	36	61934	Key
13	51542	Spring Pin (2x18L)	37	66-6132A37	Balancer Shaft
14	66-6133C14	Rear End Plate	38	60-613139	Washer (3x13)
15	66-6132A15	Rotor	39	66-6132A54	Spanner
16	66-6132A16	Rotor Blade(5)	40	OR03904301	O-Ring (39.4x3.1)
17	66-6133A17	Screw (M5x12L)	41	40130	O-Ring (8.8x1.7)
18	66-6133C18	Cylinder	42	OR00200100	O-Ring (2x1)
19	66-6133C19	Front End Plate	43	82247	O-Ring (13.5x1.5)
20	66-6133C20	Swivel Exhaust	44	06001	Ball Bearing (6001)
21	OR00307108	O-Ring (3.68x1.78)	45	06001P	Ball Bearing (6001P)
22	STW14	Retaining Ring (STW-14)	46	60-613142	Pad (6")
23	66-6133C08	Spring	47	66-6133C22	Stopper
24	66-6132A12	Retainer Ring	48	66-6133A11	Washer

* optional part

66-6133C-0001