


1/4" AIR SCREW DRIVER

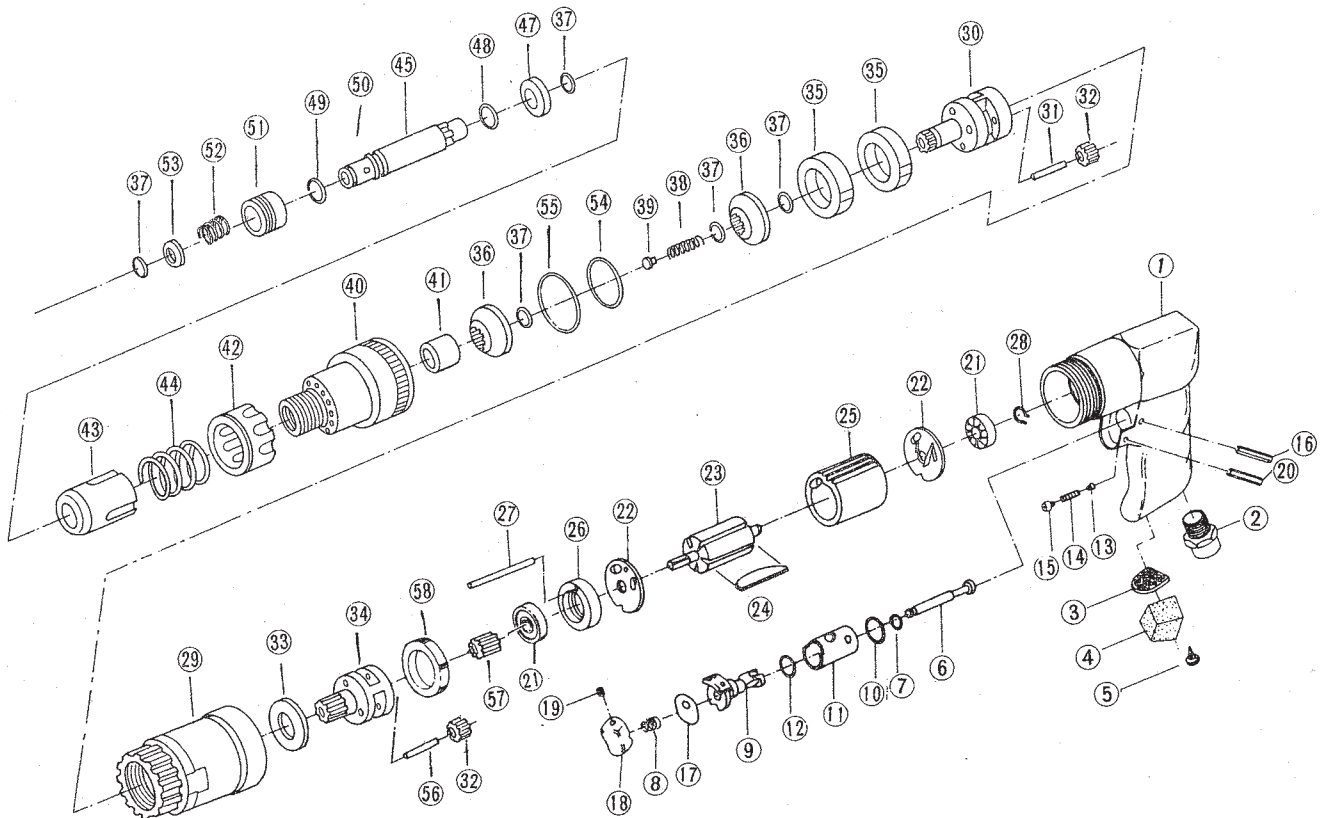

PARTS LIST

Index No.	Parts No.	Description	Qty Per tool
1	2401	Body	1
2	2234	Body Nut	1
3	2318	Muffler	1
4	2382	Muffler Element	1
5	2317	Screw	2
6	2367	Valve Stem	1
7	3321	"O" Ring	1
8	2371	Valve Spring	1
9	2369	Reverse Valve	1
10	2366	"O" Ring	1
11	2370	Valve Body	1
12	2365	"O" Ring	1
13	2372	Detent Pin	1
14	2381	Detent Spring	1
15	2362	Set Screw	1
16	3402	Retaining Pin	1
17	2361	Detent Cover	1
18	2368	Trigger	1
19	2363	Set Screw	1
20	2383	Retaining Pin	1
21	3309	Bearing 626Z	2
22	2357	End Plate	2
23	2567	Rotor	1
24	3204	Vane	5
25	2359	Cylinder	1
26	2360	Spacer	1
27	2358	Cylinder Dowel	1
28	2201	Retaining Ring	1
29	2558	Spindle Housing	1

Index No.	Parts No.	Description	Qty Per tool
30	2569	Front Spindle	1
31	2572	Planet Gear Pin	3
32	2559	Planet Gear	6
33	2575	Washer	1
34	2570	Rear Spindle	1
35	2271	Bearing 6201Z	2
36	2560	Clutch Plate	2
37	2584	Snap Ring	5
38	2568	Clutch Spring	1
39	2580	Clutch Spring Guard	1
40	2561	Clutch Housing	1
41	2571	Bushing	1
42	2579	Torque Adjusting Collar	1
43	2562	Outer Sleeve Chuck	1
44	2585	Torque Adjusting Spring	1
45	2563	Chuck Shaft	1
47	2582	Throttle Washer	1
48	2366	"O" Ring	1
49	2566	Snap Ring	1
50	2573	Steel Ball	1
51	2564	Chuck Sleeve	1
52	2586	Chuck Spring	1
53	2583	Chuck Spacer Ring	1
54	2578	"O" Ring	1
55	2576	Washer	1
56	2574	Planet Gear Pin	3
57	2565	Internal Gear	1
58	2581	Collar	1

Printed in Japan