



### PARTS LIST

No.	Parts No.	Description	Q'ty
1	4526-01	Front Cap	1
3	4526-03	Bushing	1
4	4526-04	Retaining Ring [ST-4526]	1
5	4526-05	O-Ring (P4x1.9) [ST-4526]	2
	4526-05	O-Ring (P4x1.9) [ST-4526A]	1
6	4526-06	3/8" Anvil	1
	4526-06A	1/2" Anvil	1
7	4526-07	Pin (Φ4.75x29)	2
8	4526-08	Hammer	2
9	4526-09	Hammer Case	1
10	4526-10	Bolt	1
11	4526-11	Ball Bearing (R6)	2
12	4526-12	Oil Seal	1
13	4526-13	Front Plate	1
14	4526-14	Steel Ball (Φ4mm)	1
15	4526-15	Rotor	1
17	4526-17	Rotor Blade	7
18	4526-18	Pin (Φ2x6)	2
19	4526-19	Cylinder	1
20	4526-20	Rear Plate	1
21	4526-21	Handle	1
22	4526-22	Hook	1

No.	Parts No.	Description	Q'ty
23	4526-23	O-Ring (P11x2.4)	1
24	4526-24	Screw	1
25	4526-25	Pin (Φ3x24)	2
29	4526-29A	Air Inlet (NPT18)	1
	4526-29B	Air Inlet (PT19)	1
30	4526-30	Muffler	1
31A	4526-31A	Valve Rod	1
32	4526-32	O-Ring (P15.5x1.5)	1
33	4526-33	Bushing	1
34	4526-34	Speed Switch	1
35	4526-35	Iron Ball (Φ3.175mm)	2
36	4526-36	Spring	2
37	4526-37	Screw	1
38A	4526-38A	Reverse Valve	1
40	4526-40	Pin (Φ2x14)	1
41	4526-41	Switch Lever	1
42	4526-42	O-Ring (P11x1.5)	1
43	4526-43	Retaining Ring [ST-4526A]	1
44	4526-44	O-Ring (P7x1.9) [ST-4526A]	1
45	4526-45	Adjuster	1
46	4526-46	Spring	1
47	4526-47	Reverse Valve	1