



#### PARTS LIST

No.	Parts No.	Description	Q'ty	No.	Parts No.	Description	Q'ty
1	4462-01	Retaining Ring	1	23	4462-23	Rear Plate	1
2	4462-02	Washer	1	24	4462-24	Ball Bearing (696)	1
3	4462-03	Spring	1	25	4462-25	Handle	1
4	4462-04	Bushing	1	26	4462-26	Switch Lever	1
5	4462-05	Front Cap	1	27	4462-27	Pin (Φ3x26)	1
6	4462-06	Bushing	1	28	4462-28	Screw	1
7	4462-07	Anvil	1	29	4462-29	Muffler	1
8	4462-08	Steel Ball (Φ4mm)	1	30	4462-30	O-Ring (P8x1.5)	2
9	4462-09	Pin (Φ4.75x29)	2	31A	4462-31A	Air Inlet (18NPT)	1
10	4462-10	Ring	2	31B	4462-31B	Air Inlet (19PT)	1
11	4462-11	Hammer	1	32	4462-32	Hook	1
12	4462-12	Bolt	1	33	4462-33	O-Ring (P4x1.9)	3
13	4462-13	O-Ring (P34.6x2.62)	1	34	4462-34	Adjuster	1
14	4462-14	O-Ring (P29.87x1.8)	1	35	4462-35	Bushing	1
15	4462-15	Ball Bearing (R6)	1	36	4462-36	O-Ring (P3.5x1.5)	1
16	4462-16	Oil Seal	1	37	4462-37	Valve Rod	1
17	4462-17	Front Plate	1	38	4462-38	Spring	1
18	4462-18	Rotor	1	39	4462-39	Ring	1
19	4462-19	Rotor Blade	7	40	4462-40	Screw	1
20	4462-20	Pin (Φ2x6)	1	41	4462-41	Bushing	1
21	4462-21	Cylinder	1	42	4462-42	Spring	1
22	4462-22	Pin (Φ2x18)	1	43	4462-43	Reverse Valve	1

ST-4462-P-0709A-OP