



PARTS LIST

No.	Parts No.	Description	Q't	No.	Parts No.	Description	Q't
1	6628-01	Motor Housing	1	22	6628-22	Spacer	1
2	6628-02	Pin (3x24)	1	24	6628-24	Clamp Nut	1
3	6628-03	Air Inlet	1	25	6628-25	Ball Bearing (607ZZ)	2
4A	6628-04A	Throttle Lever	1	26	6628-26	Work Housing	1
5	6628-05	Valve Stem	1	27	6628-27	O-Ring (1.48x2.4)	1
6	6628-06	Bushing	1	28	6628-28	Knob	1
7	6628-07	O-Ring (4.8x1.9)	1	29	6628-29	Work Spindle	1
8	6628-08	Spring	1	30	6628-30	Washer	1
9	6628-09	O-Ring (11.8x2.4)	1	31	6628-31	Screw (M8x20)	1
10	6628-10	Throttle Valve Plug	1	32	6628-32	Disk Washer	3
11	6628-11	O-Ring (6.5x2)	1	33	6628-33	Oscillator	1
12	6628-12	Spacer	1	34	6628-34	Clamp (1-1/4")	1
13	6628-13	Ball Bearing (626ZZ)	1	35	6628-35	Oil Cap (7/32")	1
14	6628-14	Rear End Plate	1	36	6628-36	Screw (#8x3/4")	4
15	6628-15	Rotor	1	37	6628-37	Crank Shaft	1
16	6628-16	Rotor Blade	4	38	6628-38	Ball Bearing (6900ZZ)	2
17	6628-17	Pin (2x5)	3	39	6628-39	Seal	1
18	6628-18	Cylinder	1	43	6628-43	Spring Washer (M4)	4
19	6628-19	Front End Plate	1	44	6628-44	Packing	1
20	6628-20	Ball Bearing (6000ZZ)	1	48	6628-48	Hex. Key Wrench (5mm)	1
21	6628-21	Air Regulator	1	49A	6628-49A	Exhaust Hose	1

ST-6628A-P-0706B-SL