



PARTS LIS

No.	Parts No.	Description	Q'ty
1	6611-01	Valve Screw	1
2	6611-02	O-Ring [P11]	1
3	6611-03	O-Ring [P7]	1
4	6611-04	Air Controller	2
5	6611-05	Valve Spring	1
6	6611-06	Valve Stem	1
7A	6611-07A	P006 O-Ring [P006]	1
7B	6611-07B	P007 O-Ring [P007]	1
8	6611-08	Valve Bushing	1
9	6611-09	Stop Ring	1
10	6611-10	Cap Screw [M4x15]	4
11	6611-11	Washer [M4]	4
12	6611-12	Lever Pin [φ3x23]	1
13	6611-13	Throttle Lever	1
15	6611-15	Valve Case	1
16	6611-16	Bush [0806]	1
17	6611-17	Cylinder	1
18	6611-18	Valve Steeve	1
19	6611-19	Actuate Valve	1
20	6611-20	Washer [φ3xφ8x0.8t]	1
21	6611-21	Cap Screw [M3x23]	3
22	6611-22	Gasket	1
23	6611-23	Valve Block	1
24	6611-24	Set Screw [M4x6]	2
25	6611-25	Bush [1010]	2
26	6611-26	Chuck Cover	1

No.	Parts No.	Description	Q'ty
27	6611-27	Screw	2
28	6611-28	Housing	1
28A	6611-28A	Plastic Wrapp	1
29	6611-29	Pision Ass'y	1
30	6611-30	Set Screw [5/16"x5/16"]	2
31	6611-31	Service Wrench (2mm)	1
32	6611-32	Guide Piete	1
33	6611-33	Blade Chuck	1
34A	6611-34A	Work Guide (Long)	1
34B	6611-34B	Work Guide (Short)	1
35A	6611-35A	Blade (32T)	1
35B	6611-35B	Blade (24T)	1
36	6611-36	Service Wrench (4mm)	1
38	6611-38	Screw [M4x10]	1
38A	6611-38A	Retaining Ring E3	1
39	6611-39	Uper Wear Shoe	1
40	6611-40	Blade Guide	2
41	6611-41	Bridge	1
42	6611-42	Fornt Bumper	1
43	6611-43	Rear Bumper	1
44	6611-44	Spring Pin [φ2.5x5]	2
45	6611-45	Spring	1
46	6611-46	Packing	1
47	6611-47	Packing	1
48	6611-48	Packing	1
49	6611-49	Set Screw [M5x5]	1