

SPARES PARTS AR-600M

- ①-A Nose Piece 2.4mm
- ①-B Nose Piece 3.2
- ①-C Nose Piece 4.0
- ①-D Nose Piece 4.8
- ⑤ Jaw Case
- ⑦ Jaw
- ⑧ Jaw Pusher
- ⑨ Jaw Pusher Spring
- ⑩ Jaw case lock nut.
- ⑫ Booster
- ⑬ Booster head
- ⑭ Return cap
- ⑮ Hanger
- ⑯ Dust cap
- ⑰ O-ring P-12
- ⑱ B-ring P-12
- ⑲ Booster piston
- ⑳ Draw tube.
- ㉑ O-ring P-22
- ㉒ B-ring P-22
- ㉓ Returning spring.
- ㉔ Cylinder tube
- ㉕ O-ring G-70
- ㉖ Cylinder cap.
- ㉗ Booster lock nut.
- ㉘ O-ring P-12
- ㉙ B-ring P-12
- ㉚ Cushion rubber.
- ㉛ Trigger A
- ㉜ Trigger B
- ㉝ Connecting lod
- ㉞ roll pin. A
- ㉟ roll pin. B
- ㊱ roll pin. C
- ㊲ roll pin. D
- ㊳ roll pin. E
- ㊴ Spool
- ㊵ Spool spring
- ㊶ O-ring P-3
- ㊷ B-ring P-5
- ㊸ Valve
- ㊹ Valve Spring
- ㊺ Air Hose Joint 1/4
- ㊻ Air Piston
- ㊼ Piston lod.
- ㊽ Air Piston lock nut.
- ㊾ O-ring P-60
- ㊿ Box Nut 1/4
- ① Air Hose Joint 1/4
- ② Spanner.

