



PARTS LIST

No.	Parts No.	Description	Q'ty
1	6631L-01	Driven Gear Shaft	1
2	6631L-02	Needle Roller	2
3	6631L-03	Bevel Gear	2
4	6631L-04	Ball Bearing	1
5	6631L-05	Saw Blade Holder Flange	1
6	6631L-06	Saw Blade Bolt Flange	1
7	6631L-07	Hex Socket Head Cap Bolt	1
8	6631L-08	Bevel Gear Casing	1
9	6631L-09	Ball Bearing	1
10	6631L-10	External Stop Ring	3
11	6631L-11	Casing Cover	1
12	6631L-12	Guide Plate	1
13	6631L-13	Spring Washer	1
14	6631L-14	Hex Socket Head Cap Bolt	4
15	6631L-15	Main Shaft	1
16	6631L-16	Needle Roller	6
17	6631L-17	Ball Bearing	2
18	6631L-18	Spacer Collar	1
19	6631L-19	Idler Gear	6
20	6631L-20	Internal Gear(I)	1
21	6631L-21	Bearing Support	1
22	6631L-22	Driven Shaft	1
23	6631L-23	Ball Bearing	1
24	6631L-24	Internal Gear(I)	1
25	6631L-25	Internal Stop Ring	1
26	6631L-26	Distance Nut	1
27	6631L-27	Throttle Handle	1

No.	Parts No.	Description	Q'ty
28	6631L-28	Air Inlet Bushing	1
29	6631L-29	Throttle Valve	1
30	6631L-30	Valve	1
31	6631L-31	O-Ring	1
32	6631L-32	Throttle Spring	1
33	6631L-33	Throttle Valve Plug	1
34	6631L-34	O-Ring	1
35	6631L-35	Throttle Lever Ass'y	1
36	6631L-36	Spring Pin	1
37	6631L-37	Rotor	1
38	6631L-38	Rear End Plate	1
39	6631L-39	Spring Pin	1
40	6631L-40	Ball Bearing	1
41	6631L-41	Rotor Blade	4
42	6631L-42	Cylinder	1
43	6631L-43	Front End Plate	1
44	6631L-44	Bearing Cap	1
45	6631L-45	Exhaust Cover	1
46	6631L-46	Saw Blade	1
47	6631L-47	L Shape Hex Wrench	2
48	6631L-48	L Shape Hex Wrench	1
49	6631L-49	Ball Bearing	1
K01	6631L-K01	Throttle Housing	1set
K02	6631L-K02	Valve Kit	1set
K03	6631L-K03	Drive Shaft Kit	1set
K04	6631L-K04	Bevel Gear Kit	1set
K05	6631L-K05	Main Shaft Kit	1set

ST-6631L-P-0411A-XP