


Exploded and Parts list

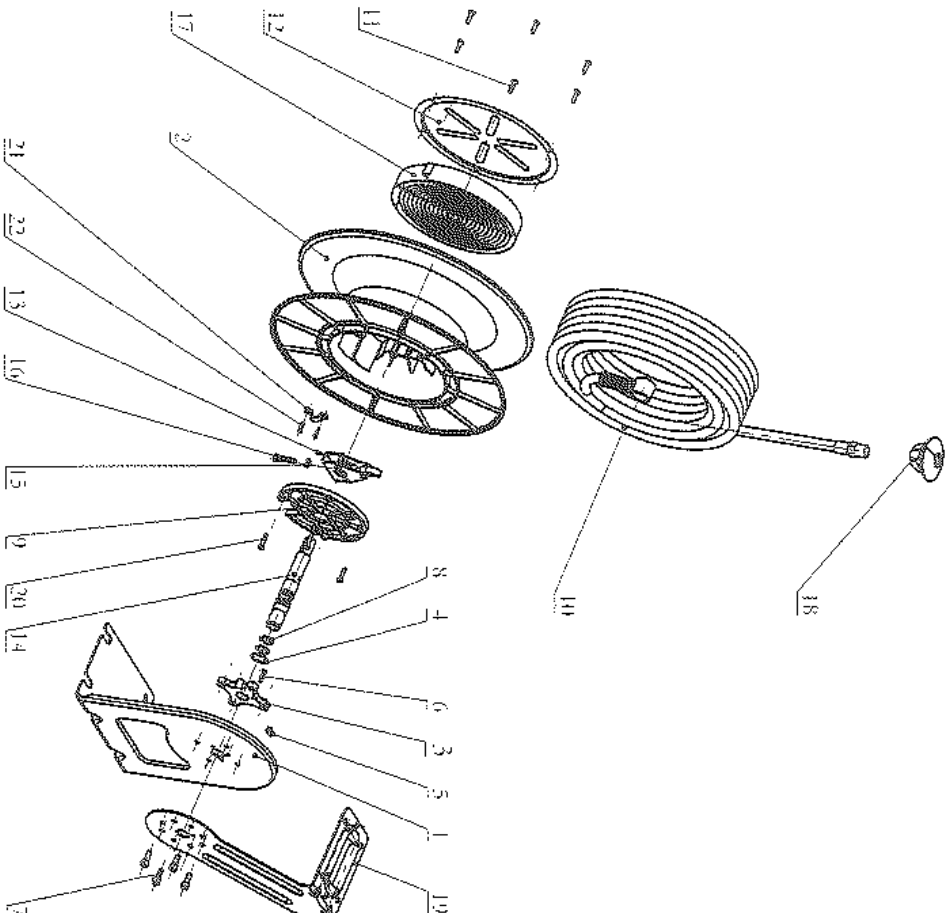

Part No.	Description	Q'ty	Part No.	Description	Q'ty
1	Base	1	12	Spring Cover	1
2	Drum	1	13	Ratchet Assembly	1
3	Axle Base	1	14	Axle	1
4	Retainer	1	15	Washer	1
5	Screw	1	16	Bolt	1
6	Screw	1	17	Main Spring	1
7	Screw	4	18	Stopper Assembly	1
8	O-ring	2	19	Support Arm A'ssy	1
9	Bracket	1	20	Screw	4
10	Hose Assembly	1	21	Hose Clamp	1
11	Screw	6	22	Screw	2