



### PARTS LIST

No.	Parts No.	Description	Q'ty
1C	6691P-01C	Housing Assembly [Incl. 1-1, 1-2, 1-3, 1-4, 12]	1
1-1	6691P-01-1	Reverse Valve Bushing	1
1-2	6691P-01-2	Reverse Valve Bushing Gear	1
1-3	6691P-01-3	Heli-Coil	4
1-4	6691P-01-4	Set Screw	1
2	6691P-02	Trigger Assembly [Incl. 2B-1, 2B-2]	1
2B-1	6691P-02B-1	Trigger Pin	1
2B-2	6691P-02B-2	Trigger	1
3	6691P-03	Throttle Valve Assembly [Incl. 3A-1, 3A-2]	1
3A-1	6691P-03A-1	Throttle Valve Pin	1
3A-2	6691P-03A-2	Throttle Valve	1
5	6691P-05	Throttle Valve Seat	1
5A	6691P-05A	O-Ring	1
6	6691P-06	Spring	1
7	6691P-07	Exhaust Deflector	1
8	6691P-08	Air Inlet	1
9	6691P-09	Housing Plate	1
10	6691P-10	Gasket	1
11	6691P-11	Screw	2
12	6691P-12	Grease Fitting	1
13	6691P-13	Reverse Valve	1
14	6691P-14	O-Ring	2
15	6691P-15	Reverse Valve Knob	1
16	6691P-16	Screw	1
17	6691P-17	Retainer	1
19	6691P-19	Rear End Plate Assembly [Incl. 18]	1

No.	Parts No.	Description	Q'ty
18	6691P-18	Ball Bearing	1
20	6691P-20	Gasket	1
21	6691P-21	Rotor	1
22	6691P-22	Rotor Blade	6
23	6691P-23	Cylinder	1
24	6691P-24	Cylinder Dowel	1
25	6691P-25	Front End Plate Assembly [Incl. 27]	1
26	6691P-26	Pin	1
27	6691P-27	Ball Bearing	1
28	6691P-28	Motor Clamp Washer	2
29	6691P-29	Separator	1
30	6691P-30	Gasket	1
31	6691P-31	Hammer Case	1
32	6691P-32	Bushing	1
33	6691P-33	Screw	4
34	6691P-34	Spring Washer	4
35	6691P-35	Washer	1
36	6691P-36	Hammer Frame	1
37	6691P-37	Hammer Pin	2
38	6691P-38	Hammer	2
39A	6691P-39A	Standard Anvil	1
39B	6691P-39B	6" Extended Anvil	1
42	6691P-42	Steel Ball	1
43	6691P-43	Spring	1
46B	6691P-46B	Handle (Option)	1
TK	6691P-TK	Tune-Up Kit [Incl. 5A, 6, 14(2), 17, 18, 20, 22(6), 27, 30, 42, 43]	