



PARTS LIST

No.	Parts No.	Description	Q'ty
1	5530-01	Motor Housing	1
2	5530-02	Bushing	1
3	5530-03	Oil Seal	1
4	5530-04	Rubber Nose Guard	1
5	5530-05	Throttle Lever	1
6	5530-06	Throttle Pin	2
7	5530-07	Screw	1
9	5530-09	Backhead	1
10	5530-10	Air Inlet	1
11	5530-11	O-Ring	1
12	5530-12	O-Ring	1
13	5530-13	Steel Ball	1
14	5530-14	Spring	1
15	5530-15	Air Regulator	1
16	5530-16	O-Ring	1
17	5530-17	Retainer Plate	1
18A	5530-18A	O-Ring	1
19	5530-19	Screw	2
20	5530-20	Collar	1
21	5530-21	Spring Pin	1
22A	5530-22A	Spring	2
23A	5530-23A	Throttle Valve	2
24A	5530-24A	Throttle Valve Plunger	2
25	5530-25	Spring	2
26A	5530-26A	Power Regulator	2

No.	Parts No.	Description	Q'ty
27	5530-27	Gasket	1
28	5530-28	Ball Bearing	1
29	5530-29	Rear End Plate	1
30	5530-30	Rotor	1
32	5530-32	Rotor Blade	6
33	5530-33	Cylinder	1
34	5530-34	Cylinder Dowel	1
35	5530-35	Front End Plate	1
36	5530-36	Oil Seal	1
37	5530-37	Ball Bearing	1
38	5530-38	O-Ring	1
39	5530-39	Retainer	1
40	5530-40	Hammer Frame	1
41	5530-41	Cam	1
42	5530-42	Hammer	1
43	5530-43	Hammer Pin	1
44	5530-44	Anvil [Incl. 45, 46]	1
45	5530-45	O-Ring	1
46	5530-46	Socket Retainer	1
48	5530-48	Washer	4
49	5530-49	Screw	4
	5530-TK	Tune-Up Kit [Incl. 11, 12, 13, 14, 16, 18A(2), 22A(2), 25(2), 28, 32(6), 37, 38, 45, 46]	